
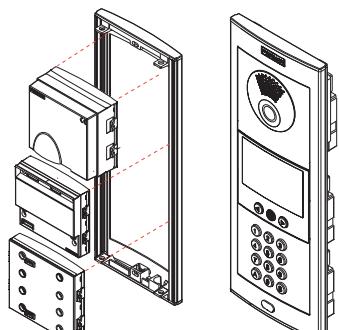
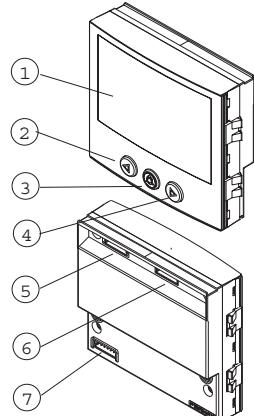


DESCRIPTION OF THE LYNX MODULE


1. Insert the modules in the SKYLINE frame as seen in the image (the amplifier on top, the Lynx Display next to the amplifier and then the remaining modules).
2. Use the included cables to wire the system (see examples below).

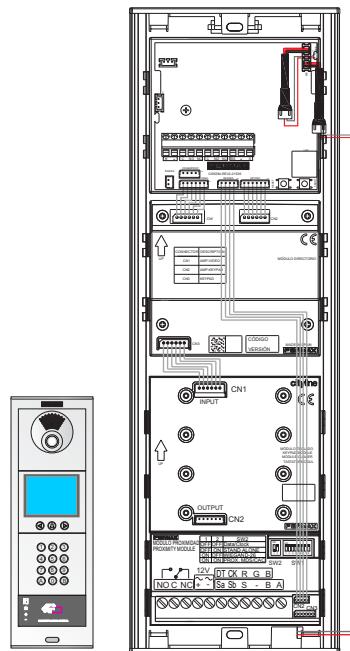

1. TFT screen
2. "Left arrow" key
3. "Bell" key
4. "Right arrow" key
5. CN1 connector (to the amplifier)
6. CN2 connector (from the amplifier)
7. CN3 connector (to the keypad)

EXAMPLES OF PRE-WIRING


WITH PROXIMITY READER

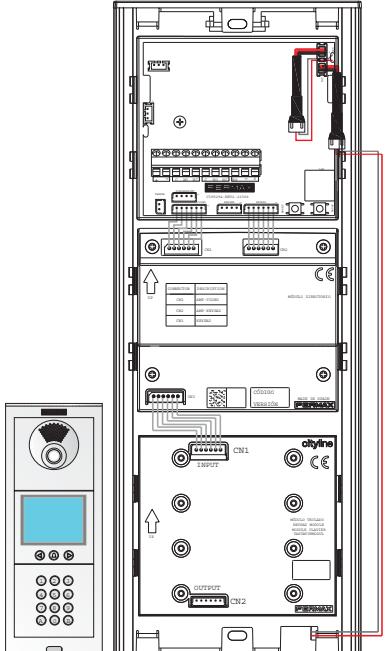

WITHOUT PROXIMITY READER

PROGRAMMING ACCESS

1. From the information screen press "0" on the keypad. The screen will display an invitation to enter the ACCESS CODE.

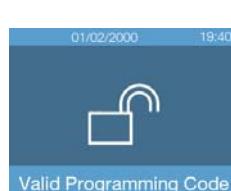


2. Enter AB21AB. If the system is configured to use 4 or 5 digit access codes, the code to enter is AB21 and AB21A respectively.

After performing this properly, the symbol of an open chain appears.





3. Enter the INSTALLER CODE. This code is 19025 by default. If it has been changed and you do not remember the new code, you can restore the default value via the procedure indicated in the Programming Manual for LYNX PANELS Cod. 97746.

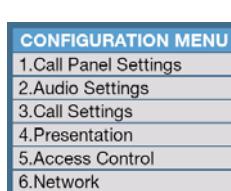

4. After this step, the CONFIGURATION MENU appears, from which you can choose the desired option by pressing the corresponding number via the keypad.

The general procedure consists in using the numeric keypad to select the desired option. Following the indications, use the "right and left" arrows keys to move through the successive fields, press "B" to confirm and return to the previous step, or press "A" to delete.

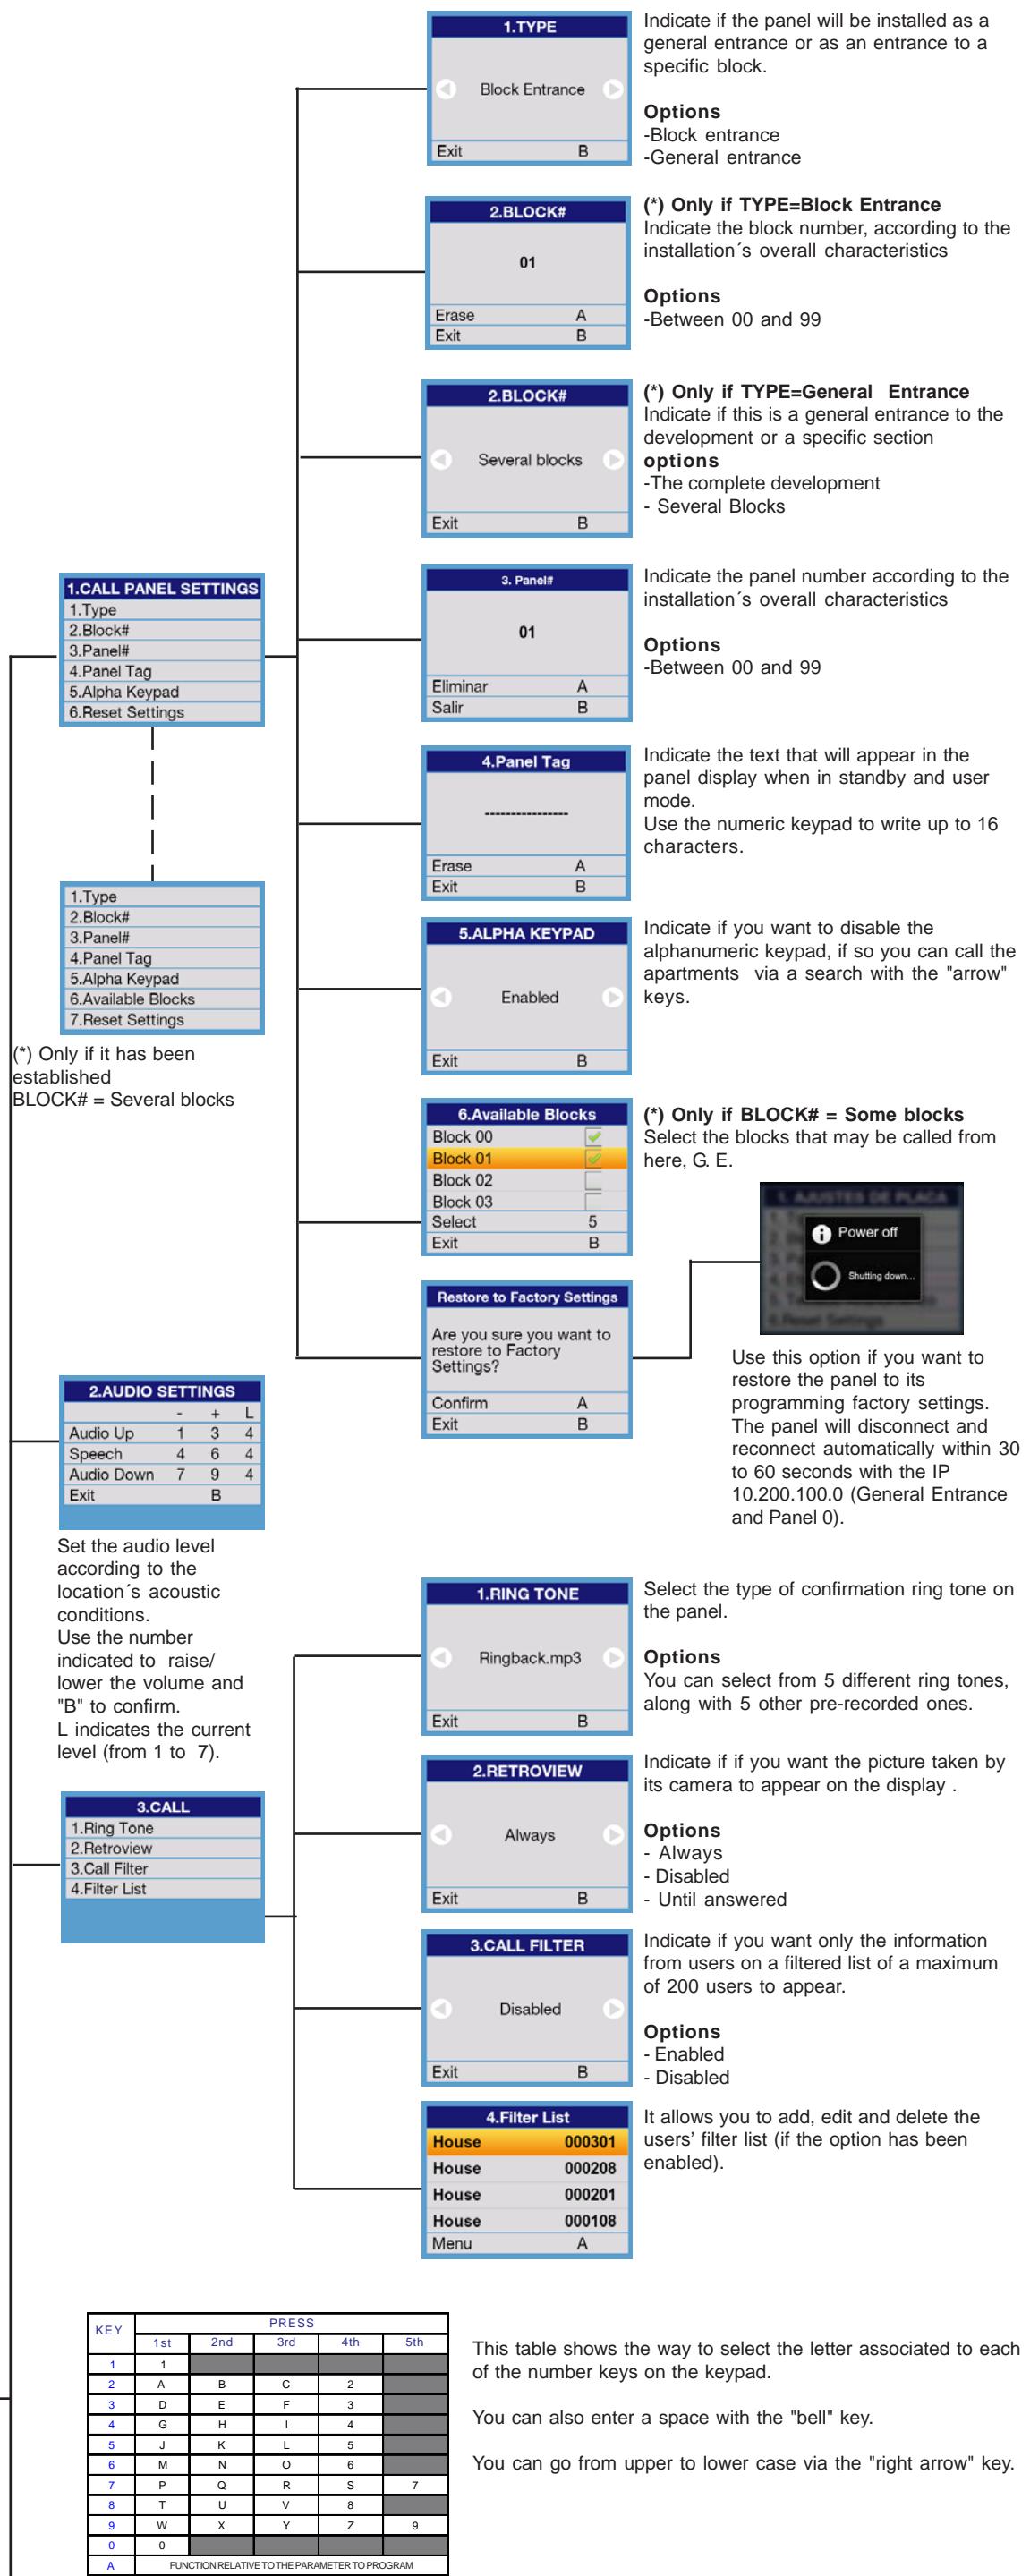

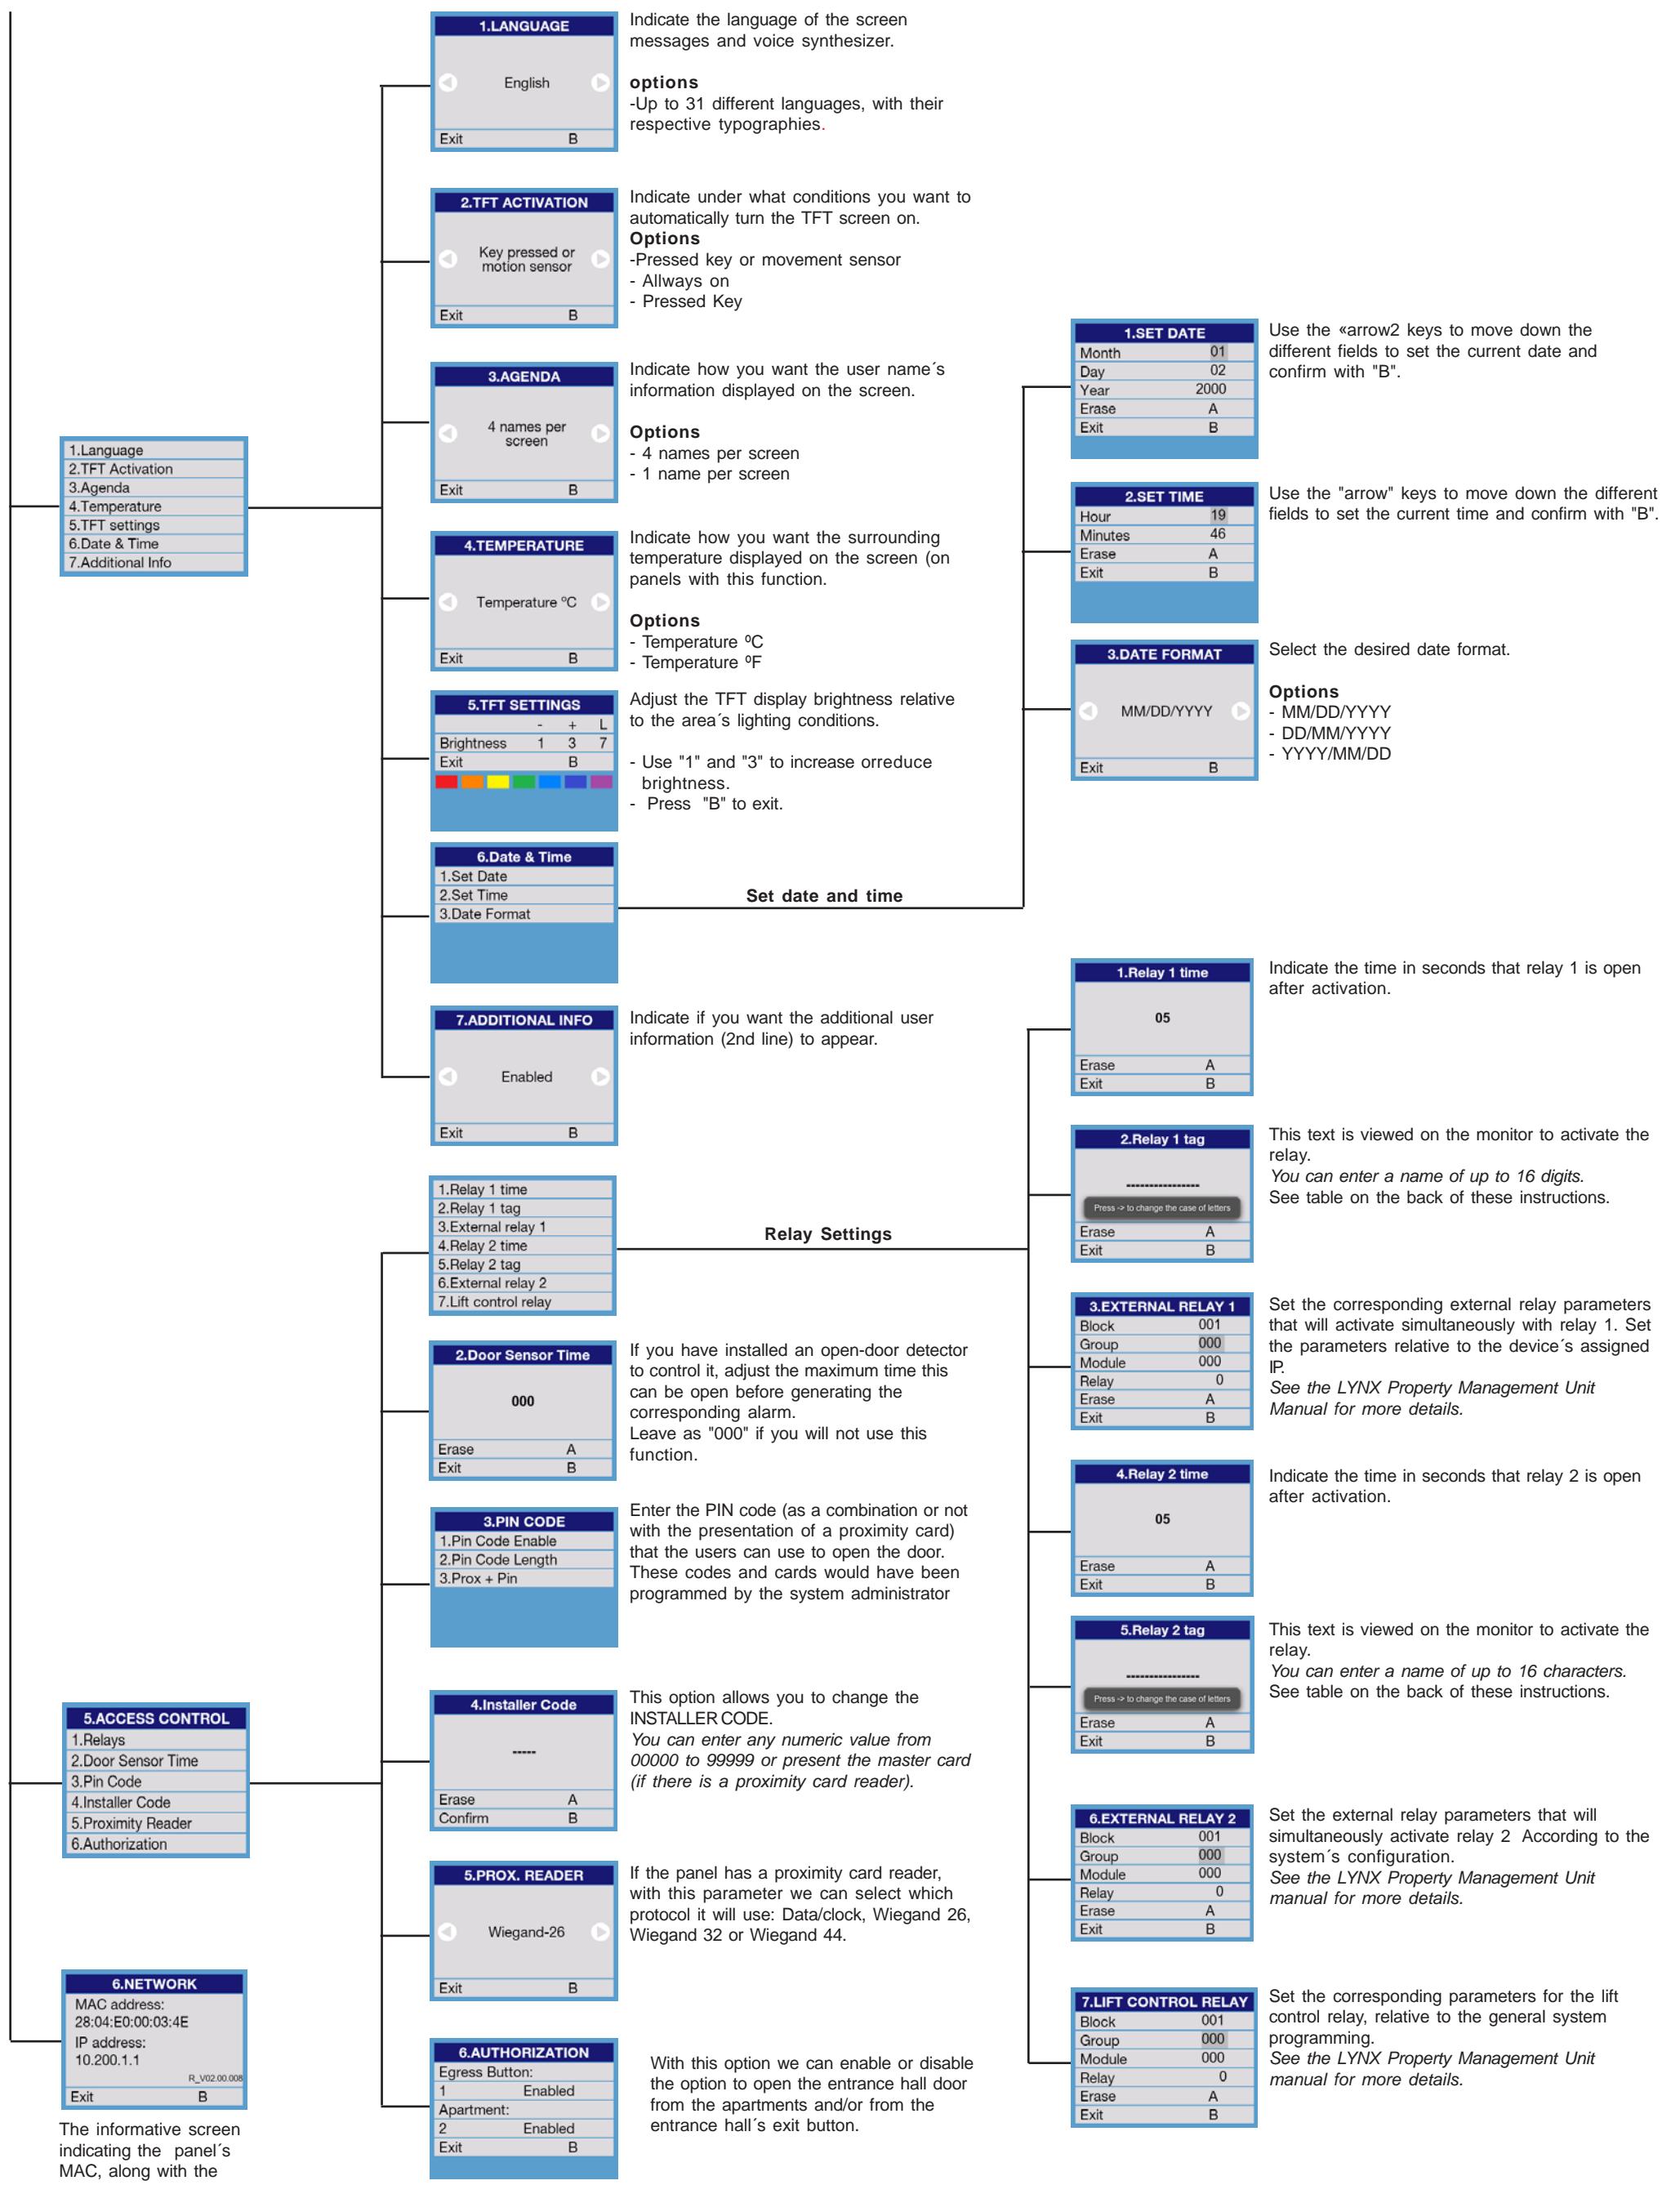

DISPLAY TECHNICAL SPECIFICATIONS

SIZE:	3.5 inches	CONTRAST:	500/1
FORMAT:	4:3	VIEWING MODES:	12 points
RESOLUTION:	320 x 240 pixels	LUMINANCE (cd/m ²):	400 nits
COLORS:	262.000	VIEWING ANGLES:	160H / 160V

BACK LIGHTING:	6 LED diodes
----------------	--------------

IMPORTANT NOTE:

This instruction sheet has the basic information, both for the installation of the module and programming.

Please see the following manuals for all of the information on the operation, installation and programming of the LYNX system:

- Lynx Digital Panels Programming Manual Code 97746
- Lynx Property Management Unit Manual. Code 97742
- Lynx Digital Panel Web Server Manual. Code 97744
- Lynx Digital Panels Installation Manual Code 97743