

Monitor-Teléfono DETECTA 6 - Guía Rápida de funcionamiento

Código 97071EI, V06_06

Apertura de puerta/ Llamada Conserje*

- Con el teléfono colgado, al pulsar este botón se realiza una **llamada al conserje** (*si existe conserjería).

Display Teclado

Muestra información sobre el estado del monitor y sobre las operaciones realizadas por el usuario.

	Encendido: CENTRAL DESCONECTADA
	Apagado: CENTRAL CONECTADA
	Alarma disparada
	Disparo desde la última conexión
	Código introducido erróneo.
	Central bloqueada por 4 dígitos erróneos
	Central o Dispositivo Conectado
	Central o Dispositivo Desconectado



Encendido de la cámara principal (*)

Encendido de la cámara secundaria (*) (si existe).

(*) función disponible según tipo de instalación

Ajuste color

Contraste

Brillo

ON/OFF

Leds del Teclado/Estado

Leds	Función	(apagado)	(encendido)	(intermittente)
	estado de la central	desconectada	conectada	en ruta de Entrada/Salida destello a 2 segundos, central parcialmente conectada
	led de omisión zonas	ninguna zona omitida	alguna zona omitida	reloj desprogramado
	alimentación	alimentación correcta	fallo de red (230 Vac)	batería baja
	eventos de alarma	No hay eventos de alarma	Hay eventos de alarma	avería / sabotaje

DETECTA 6 Monitor-Telephone - Rapid Guide to Functioning

Code 97071EI, V06_06

Door-opening/Call to Reception*

- With the telephone hung up, when you press this button a **call will be made to reception** (*if there is one).

Keypad Display

Shows information on the status of the monitor and on the operations carried out by the user.

	On: CU DISCONNECTED
	Off: CU CONNECTED
	Alarm triggered
	Trigger since the last connection
	Incorrect code entered.
	CU blocked by 4 incorrect digits
	CU or Device Connected
	CU or Device Disconnected



Switch-on of main camera (*)

Switch-on of secondary camera (*) (if it exists).

(*) function only available in some types of installation

Colour Adjustment

Contrast

Brightness

ON-OFF


Keypad LED's/Status

LED's	Function	(off)	(on)	(intermittent)
	status of the CU	disconnected	connected	in Entry/Exit route 2-second intervals, CU partially connected
	area omission LED	no area omitted	some area omitted	clock not programmed
	power supply	correct power supply	power supply fault (230 Vac)	battery low
	alarm events	there are no alarm events	there are alarm events	breakdown / sabotage

Monitor-Teléfono DETECTA 6 - Guía Rápida de funcionamiento



Conexión/ Desconexión de la Alarma

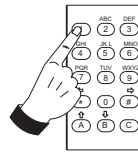

- Para **CONECTAR** la Alarma teclear:
[Código de usuario] + [#]
- Para **DESCONECTAR** la Alarma teclear:
[Código de usuario] + [#]

Guía rápida de funciones:

- Conexión rápida:

[*] [#]
2seg

- Conexión nocturna o parcial:

[Código de usuario] + [A_{2seg}] + [#]

- Código de coacción:

(Código de usuario + 1) + [#]

(por ejemplo código usuario 1111): **1112#**

- Omisión nocturna y restauración de zonas:

[Código de usuario] + [A_{2seg}] + [Nº Zona] + [#]


(por ejemplo Zona 4): **1111A_{2seg} 4#**

Por defecto Código Usuario Máster: 1111

DETECTA 6 Monitor-Telephone - Rapid Guide to Functioning



Connection/Disconnection of Alarm

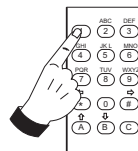

- o **CONNECT** the Alarm, enter:
[User Code] + [#]
- To **DISCONNECT** the Alarm, enter:
[User Code] + [#]

Rapid guide to functions:

- Rapid connection:

[*] [#]
2sec

- Night-time or partial connection:

[User Code] + [A_{2sec}] + [#]

- Coaction code:

(User Code + 1) + [#]

(for example, user code 1111): **1112#**

- Night-time omission and restoration of areas:

[User Code] + [A_{2sec}] + [Area No.] + [#]

(for example, Zone 4): **1111A_{2sec} 4#**

By default Master User Code: 1111