


PREPARACION DEL KIT / PREVIOUS STEPS KIT CONNECTION


1. Cortar los conectores.

1. *Cut the connectors.*

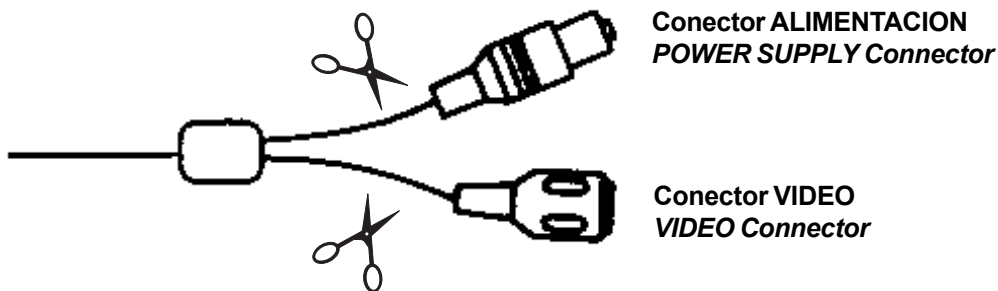

2. Pelar los cables e identificar.

2. *Strip and identify the wires.*

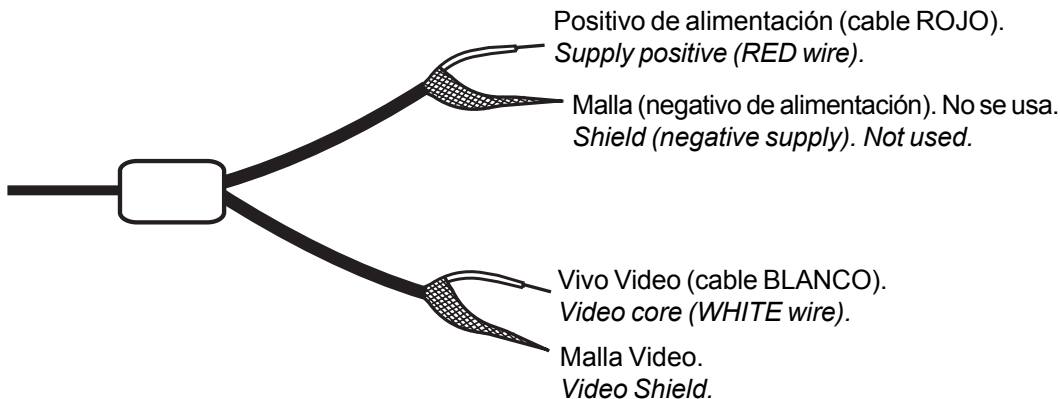

3. Conectar al módulo adaptador Ref. 6080, tal y como indican las instrucciones.

3. *Connect to the Adaptor Module ref. 6080. It is shown in the instructions.*